

STRUCTURE Silicon Monolithic Integrated Circuit

NAME OF PRODUCT DC-AC Inverter Control IC

TYPE BD9883AF, BD9883FV

FUNCTION • 36V High voltage process

· 1ch control with Half-bridge

· Lamp current and voltage sense feed back control

· Sequencing easily achieved with Soft Start Control

Short circuit protection with Timer Latch

· Under Voltage Lock Out

· Mode-selectable the operating or stand-by mode by stand-by pin

OAbsolute Maximum Ratings (Ta = 25°C)

Parameter	Symbol	Limits	Unit
Supply Voltage	Vcc	30	V
BST	BST	36	V
BST-ST Voltage Difference	BST-SW	7	٧
Operating Temperature Range	Topr	-40∼+8 5	Ç
Storage Temperature Range	Tstg	-55 ∼ +125	Ĉ
Power Dissipation	Pd	550*1 (BD9883AF)	18/
TOWER DISSIPATION	ru	650*2(BD9883FV)	- mW
Maximum Junction Temperature	Tjmax	+125	Ç

[&]quot;'Pd derated at 5.5mW/C for temperature above Ta = 25°C (When mounted on a PCB 70.0mm×70.0mm×1.6mm)

ORecommended operating condition

Parameter	Symbol	Limits	Unit
Supply voltage	Vcc	6.0~22.0	V
CT oscillation frequency	fст	20~150	kHz
BST voltage	BST	4.0~30.0	٧
BST-SW voltage difference	BST-SW	4.0~6.0	V
BCT oscillation frequency	fect	0.10~0.50	kHz

Status of this document

The Japanese version of this document is the official specification.

Please use the translation version of this document as a reference to expedite understanding of the official version.

If these is any uncertainty in translation version of this document, official version takes priority.

[™]Pd derated at 6.5mW/°C for temperature above Ta = 25°C (When mounted on a PCB 70.0mm×70.0mm×1.6mm)




○Electric Characteristics (Ta=25°C, VCC=7V)


Parameter	Symbol		Limits			Conditions
		MIN.	TYP.	MAX.	Unit	conditions
((WHOLE DEVICE))				-		
Operating current	lcc1	_	9.0	17.0	mA	fCT=100kHz
Stand-by current	Icc2		5.0	10.0	μΑ	
((STAND BY CONTROL))		· · · · · · · · · · · · · · · · · · ·				
Stand-by voltage H	VstH	1.7	_	vcc	٧	System ON
Stand-by voltage L	VstL	-0.3	_	0.7	v	System OFF
Stand-by hysteresis	⊿Vst	0.05	0.20	0.35	v	
((UVLO BLOCK))						
Operating voltage	Vuv I oH	5.15	5.40	5.65	V	
Shut down voltage	VuvToL	4.90	5.15	5.40	V	
((REG BLOCK))						
REG output voltage	VREG	5.30	5.50	5.70	V	Vcc>6.0V
REG source current	IREG	20.0	_	_	mA	
((OSC BLOCK))						
Active edge current	lact	1.35/RT	1.5/RT	1.65/RT	A	
Negative edge current	Ineg	lact×10	lact×13	lact×16	A	
OSC Max voltage	VoscH	1.8	2.0	2.2	٧	fCT=50kHz, fCT=120kHz
09C Min voltage(1)	VoscL1	0.2	0.4	0.6	٧	fCT=50kHz
OSC Min voltage(2)	VoscL2	0.05	0.15	0.25	V	fCT=120kHz
Soft start current	Iss	0.50	1.00	1.50	μA	
SRT ON resistance	RSRT	_	150	300	Ω	
((BOSC BLOCK))						
BOSC Max voltage	VBCTH	1.920	2.000	2.080	v	fBCT=0.3kHz
BOSC Min Voltage	VBCTL	0.400	0.500	0.600	٧	fBCT=0.3kHz
BOSC constant current	IBCT	1.35/897	1.5/BRT	1.65/BRT	A	VBCT=0.2V
((TIMER LATCH))	•					
Timer Latch voltage	Vscp	1.8	2.0	2.2	V	
Timer Latch current	Iscp	0.25	0.50	0.75	μА	
((FEED BACK BLOCK))	•				•	
IS threshold voltage	Vis	1.220	1.250	1.280	V	
VS threshold voltage	Vvs	1.220	1.250	1.280	٧	
IS source current 1	lis1	_	_	0.9	μA	DUTY=2.0V
IS source current 2	lis2	12.0	20.0	28.0	μА	DUTY=0V、IS=0.5V
VS source current	Ivs			0.9	μА	
FB over voltage detect voltage	Vovf	2.2	2.5	2.8	v	
IS COMP detect Voltage	Visc	0.3	0.4	0.5	V	
((OUTPUT BLOCK))		·				1
LN output sink current	RsinkLN	_	15	30	Ω	
LN output source current	PiscurceLN	_	30	60	Ω	
HN output sink current	RsinkHN	_	15	30	Ω	VBST-VSW=5.0V
HN output source current	PsourceHN	_	30	60	Ω	VBST-VSW=5.0V

(This product is not designed for normal operation with in a radio active environment.)




OPackage Dimensions

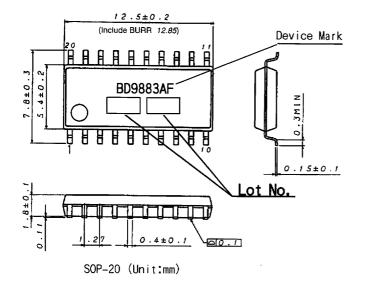

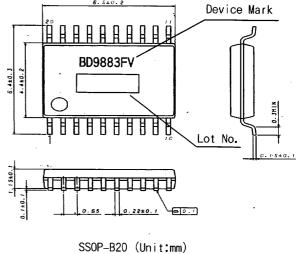

OBlock Diagram

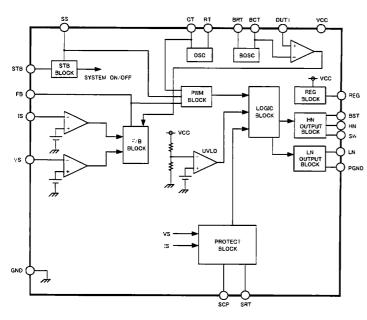

OPin Description

Pin No.	Pin Name	Function
1	DUTY	Control PWM mode and BURST mode
2	ВСТ	External capacitor from BCT to GND for adjusting the BURST triangle oscillator
3	BRT	External resistor from BRT to GND for adjusting the BURST triangle oscillator
4	ст	External capacitor from CT to GND for adjusting the triangle oscillator
5	RT	External resistor from RT to GND for adjusting the triangle oscillator
6	SRT	External resistor from SRT to RT for adjusting the triangle oscillator
7	GND	GROUND
8	FB	Error amplifier output
9	IS	Error amplifier input①
10	VS	Error amplifier input②
11	STB	Stand-by switch
12	SCP	External capacitor from SCP to GND for Timer Latch
13	SS	External capacitor from SS to GND for Soft Start Control
14	PGND	Ground for FET drivers
15	LN	NMOS FET driver
16	HN	NMOS FET driver
17	SW	Low voltage for HN output
18	BST	Boot-Strap input for HN output
19	REG	Internal regulator output
20	VCC	Supply voltage input



ONOTE FOR USE

- 1. When designing the external circuit, including adequate margins for variation between external devices and the IC. Use adequate margins for steady state and transient characteristics.
- 2. Recommended Operating Range

The circuit functionality is guaranteed within of ambient temperature operation range as long as it is within recommended operating range. The standard electrical characteristic values cannot be guaranteed at other voltages in the operating ranges, however, the variation will be small.

3. Mounting Failures

Mounting failures, such as misdirection or miscounts, may harm the device.

4. Electromagnetic Fields

A strong electromagnetic field may cause the IC to malfunction.

- 5. The GND pin should be the location within ± 0.3 V compared with the PGND pin
- 6. BD9883AF, BD9883FV has the short circuit protection with Thermal Shut Down System. When STB or Vcc pin re-supplied,
 They enables to cancel the latch. If It rise the temperature of the chip more than 170°C (TYP), It make the external FET OFF
- 7. Absolute maximum ratings are those values that, if exceeded, may cause the life of a device to become significantly shortened. Moreover, the exact failure mode caused by short or open is not defined. Physical countermeasures, such as a fuse, need to be considered when using a device beyond its maximum ratings.
- 8. About the external FET, the parasitic Capacitor may cause the gate voltage to change, when the drain voltage is switching.

 Make sure to leave adequate margin for this IC variation.
- 9. On operating Slow Start Control (SS is less than 2.2V), It does not operate Timer Latch.
- 1 0. By STB voltage, BD9883AF, BD9883FV is changed to 2 states. Therefore, do not input STB pin voltage between one state and the other state $(0.7 \sim 1.7 \text{V})$.
- 1 1. The pin connected a connector need to connect to the resistor for electrical surge destruction.
- 1 2. This IC is a monolithic IC which (as shown is Fig-1)has P'substrate and between the various pins. A P-N junction is formed from this P layer of each pin. For example, the relation between each potential is as follows,
 - O(When GND > PinB and GND > PinA, the P-N junction operates as a parasitic diode.)
 - O(When PinB > GND > PinA, the P-N junction operates as a parasitic transistor.)

Parasitic diodes can occur inevitably in the structure of the IC. The operation of parasitic diodes can result in mutual interference among circuits as well as operation faults and physical damage. Accordingly you must not use methods by which parasitic diodes operate, such as applying a voltage that is lower than the GND(P substrate)voltage to an input pin.

Resistance

Transistor (NPN)

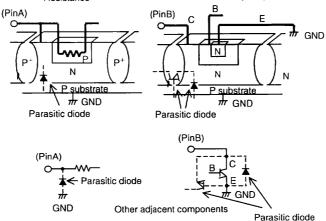


図-1 Simplified structure of a Bipolar IC

Notes

- No technical content pages of this document may be reproduced in any form or transmitted by any
 means without prior permission of ROHM CO.,LTD.
- The contents described herein are subject to change without notice. The specifications for the
 product described in this document are for reference only. Upon actual use, therefore, please request
 that specifications to be separately delivered.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard
 use and operation. Please pay careful attention to the peripheral conditions when designing circuits
 and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or
 otherwise dispose of the same, no express or implied right or license to practice or commercially
 exploit any intellectual property rights or other proprietary rights owned or controlled by
- ROHM CO., LTD. is granted to any such buyer.
- Products listed in this document are no antiradiation design.

The products listed in this document are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of with would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

About Export Control Order in Japan

Products described herein are the objects of controlled goods in Annex 1 (Item 16) of Export Trade Control Order in Japan.

In case of export from Japan, please confirm if it applies to "objective" criteria or an "informed" (by MITI clause) on the basis of "catch all controls for Non-Proliferation of Weapons of Mass Destruction.





Thank you for your accessing to ROHM product informations.

More detail product informations and catalogs are available,
please contact your nearest sales office.

Please contact our sales offices for details;

```
U.S.A / San Diego
                        TEL: +1(858)625-3630
                                                 FAX: +1(858)625-3670
       Atlanta
                        TEL: +1(770)754-5972
                                                 FAX: +1(770)754-0691
       Dallas
                        TEL: +1(972)312-8818
                                                 FAX: +1(972)312-0330
Germany / Dusseldorf
                        TEL: +49(2154)9210
                                                 FAX: +49(2154)921400
United Kingdom / London TEL: +44(1)908-282-666
                                                 FAX: +44(1)908-282-528
France / Paris
                        TEL: +33(0)1 56 97 30 60 FAX: +33(0) 1 56 97 30 80
China / Hong Kong
                        TEL: +852(2)740-6262
                                                 FAX: +852(2)375-8971
       Shanghai
                        TEL: +86(21)6279-2727
                                                 FAX: +86(21)6247-2066
       Dilian
                        TEL: +86(411)8230-8549
                                                 FAX: +86(411)8230-8537
       Beijing
                        TEL: +86(10)8525-2483
                                                 FAX: +86(10)8525-2489
Taiwan / Taipei
                        TEL: +866(2)2500-6956
                                                 FAX: +866(2)2503-2869
Korea / Seoul
                        TEL: +82(2)8182-700
                                                 FAX: +82(2)8182-715
Singapore
                        TEL: +65-6332-2322
                                                 FAX: +65-6332-5662
Malaysia / Kuala Lumpur
                        TEL: +60(3)7958-8355
                                                 FAX: +60(3)7958-8377
Philippines / Manila
                        TEL: +63(2)807-6872
                                                 FAX: +63(2)809-1422
Thailand / Bangkok
                        TEL: +66(2)254-4890
                                                 FAX: +66(2)256-6334
```

Japan / (Internal Sales)

Tokyo 2-1-1, Yaesu, Chuo-ku, Tokyo 104-0082

TEL: +81(3)5203-0321 FAX: +81(3)5203-0300

Yokohama 2-4-8, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa 222-8575

TEL: +81(45)476-2131 FAX: +81(45)476-2128

Nagoya Dainagayo Building 9F 3-28-12, Meieki, Nakamura-ku, Nagoya, Aichi 450-0002

TEL: +81(52)581-8521 FAX: +81(52)561-2173

Kyoto 579-32 Higashi Shiokouji-cho, Karasuma Nishi-iru, Shiokoujidori, Shimogyo-ku,

Kyoto 600-8216

TEL: +81(75)311-2121 FAX: +81(75)314-6559

(Contact address for overseas customers in Japan)

Yokohama TEL: +81(45)476-9270 FAX: +81(045)476-9271