

SRM3270-A


Dual LED Lamp

Features

- Milky diffusion lens type
- \$\phi 3mm(T-1) all plastic mold type
- Radiation color (Red, Y-Green)
- Low power consumption

Outline Dimensions

unit: mm

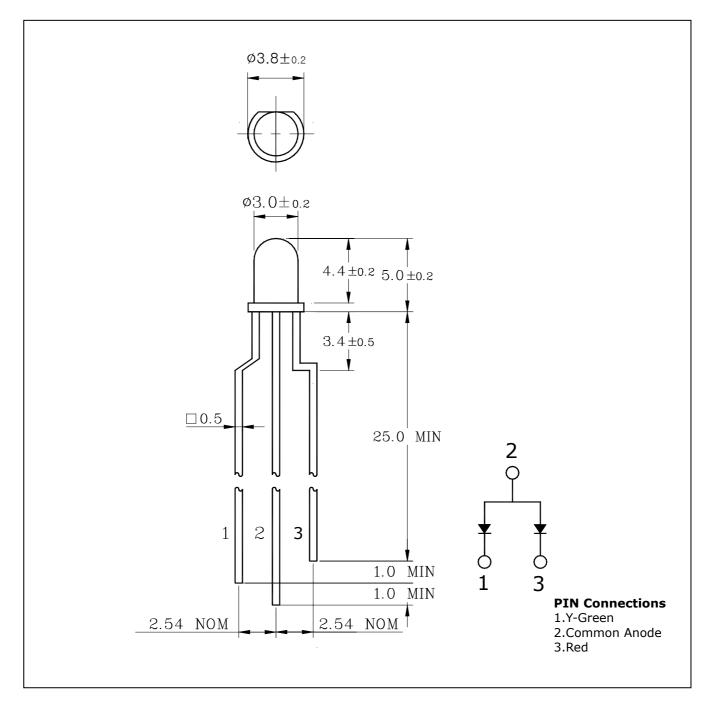

KLD-4000-000

Absolute maximum ratings

Characteristic	Symbol	Rati	Unit			
	Symbol	RED	YELLOW-GREEN	Unit		
Power Dissipation	P _D 85		55	mW		
Forward Current	${ m I}_{\sf F}$	30	20	mA		
*1Peak Forward Current	I_{FP}	50	50	mA		
Reverse Voltage	V_R	4	V			
Operating Temperature	T_{opr}	-25^	$^{\circ}$			
Storage Temperature	T_{stg}	-30~	$^{\circ}$			
Soldering Temperature	T _{sol}	260° for 5 seconds				

^{*1.}Duty ratio = 1/16, Pulse width = 0.1ms

Electrical Characteristics

Characteristic	Symbol		Test Condition	Min.	Тур.	Max.	Unit
Forward Voltage	V _F	Red	I _F = 20mA	1.7	-	2.5	V
		Y-Green		-	-	2.5	
Luminous Intensity	I _V	Red	I _F = 20mA	-	24	-	mcd
		Y-Green		-	14	-	
Peak Wavelength	λ_{P}	Red	I _F = 20mA	-	660	-	nm
		Y-Green		-	570	-	
Spectrum Bandwidth	Δλ	Red	I_F = 20mA	-	20	-	nm
		Y-Green		-	30	-	
Reverse Current	${ m I}_{\sf R}$		$V_R=4V$	-	-	10	uA
* ² Half angle	θ1/2		$I_F = 20mA$	-	±20	-	deg

^{*2.} θ 1/2 is the off-axis angle where the luminous intensity is 1/2 the peak intensity

KLD-4000-000 2

Characteristic Diagrams

Fig. 1 I_F - V_F

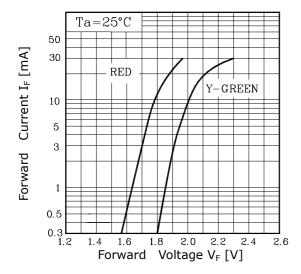


Fig. 3 I_F – Ta

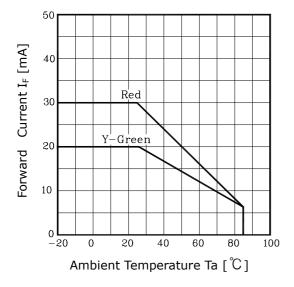


Fig. 2 I_V - I_F

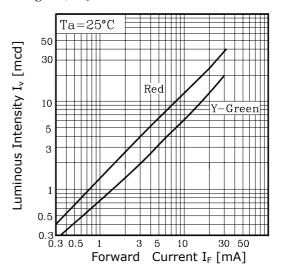


Fig.4 Spectrum Distribution


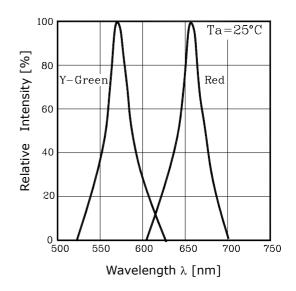


Fig. 5 Radiation Diagram

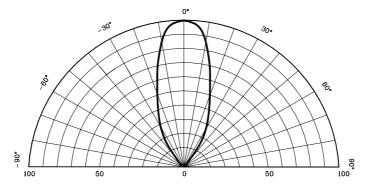

Relative Luminous Intensity Iv [%]

KLD-4000-000 3

These AUK products are intended for usage in general electronic equipments (Office and communication equipment, measuring equipment, domestic electrification, etc.).

Please make sure that you consult with us before you use these AUK products in equipments which require high quality and/or reliability, and in equipments which could have major impact to the welfare of human life(atomic energy control, airplane, spaceship, traffic signal, combustion central, all types of safety device, etc.).

AUK cannot accept liability to any damage which may occur in case these AUK products were used in the mentioned equipments without prior consultation with AUK.

KLD-4000-000 4